

JET-II MK



使用说明书

感谢您购买我们的产品!
www.jetbeamlight.com

产品特性

造型精致小巧, 方便随身携带, 多用于日常徒步、露营、维修、应急等多种照明用途
四种亮度功能, 最高可达510流明
最远可达138米的照射距离, 最大光强4800cd
数字恒流驱动电路, 续航最长可达150小时
电池反接保护功能
符合IPX-8防水标准(水下2米)
1.5 米防摔能力

产品参数

LED: Cree XP-L HI
最大输出: 510流明
镜片: 镀膜矿物质玻璃
筒身材质: 航太铝合金
筒身处理: 军规-III 阳极军灰色硬氧化处理
使用电池: 1节16340或CR123A锂电池
开关: 头部拧头开关
长度: 65mm
头部直径: 21.8mm
尾部直径: 21.8mm
重量: 30克 (不含电池)

选用电池

电池类型	尺寸规格	标称电压	是否可用
可充电锂离子电池	16340	3.7V	推荐
一次性锂电池	CR123A	3V	可用

亮度和时间

FL1 STANDARD	高亮 1*16340	中亮	低亮	极低亮
	510流明	100流明	5流明	0.5流明
	0.75小时	1.5小时	15小时	150小时
	138米			
	4800坎德拉			
	1.5米 (防跌落高度)			
	IPX-8, 水下2米			



 
注:

- 以上数据按照国际手电筒测量标准ANSI/NEMA FL1所述之测量方法, 使用1节680mAh 3.7V16340充电锂电池在实验室内测量所得,不同电池或使用环境可能会对以上数据产生影响.
- 电筒在开启高亮档一段时间(1分钟左右)后会自动降档到65%的亮度的档位, 以防止过热并有效保护LED寿命, 如果需要再用超高亮档, 只需关闭电筒后再次打开或单击侧按进行换档.

使用电筒

装入电池

请按下图所示, 装入1节16340锂电池或1节CR123A锂电池:
(如图)

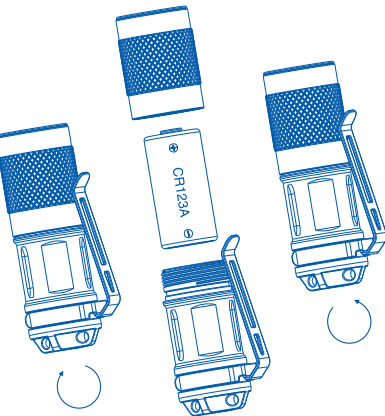


开启/关闭手电筒

开启手电筒: 将灯头拧紧, 手电筒通电, 手电点亮;
关闭手电筒: 将灯头拧松, 手电筒断电, 手电不亮

档位切换

 在正常亮灯状态, 来回快速拧松再拧紧灯头, 手电筒按极低 > 低 > 中 > 高的顺序换挡调光.

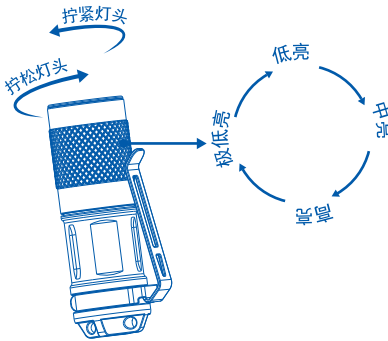

更换电池

当电池电量不足, 电筒甚至会出现亮度变暗或无法调光的情况. 此时, 应更换电池.

保养电筒

请每半年使用软布清洁电筒的螺杆, 并使用硅润滑油润滑螺杆.

如果长时间不使用手电筒, 务必取出电池, 电筒放入包装盒内.

电筒务必存放于远离易燃, 静电和潮湿的环境.



警告

- 请将电池按照正负极灯头方向放入, 反装电池电筒将不能工作.
- 若电筒放置在背包内运输或者长时间储存请把电筒内的电池取下防止错误开启或电池漏液.
- 不能将光线直接照射眼睛, 以免对眼睛造成伤害.

保固

JETBEAM® 产品拥有售后保固服务. 在购买本产品的15天内, 如果有任何质量问题均可向经销商要求免费更换. 在购买本产品的24个月内享受免费保固服务. 在超过24个月免费保固期后, 本产品享有终身有限度保固服务, 如需要更换重要部件则需收取成本费用.

本保固规则不适用于以下情况:

- 人为破坏, 拆解, 改装本产品.
- 错误操作导致产品损坏(如装反电池等).
- 电池漏液导致产品损坏.

如需协助, JETBEAM® 敬请消费者首先联系购买产品的经销商或零售商, 以获得最迅速的售后服务或发邮件到 info @jetbeamlight.com.

备注: 产品数据如有更新, 敬请以JETBEAM官方网站为准.

 
★ 仅限国内区域, 跨区销售将不予保修.

深圳市杰特明电子科技有限公司

咨询热线: +86-0755-28077748
销售邮箱: info@jetbeamlight.com
网址: www.jetbeamlight.com
公司地址: 广东省深圳市龙华新区大浪南路墩背工业区二栋三楼
邮编: 518109



JET-II MK

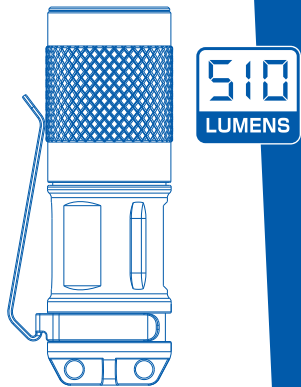

Operation Manual

Thank you for choosing our products!
www.jetbeamlight.com

Features:

- Small size, convenient for everyday carry. Specially designed for hiking, camping and emergency use
- Four brightness levels, with max output of 510 lumen
- Max beam distance up to 138 meters, max 4800cd
- Effective power management circuit; max runtime 150 hours
- Battery reverse protection function
- Waterproof rating IPX8(underwater 2 meters)
- 1.5 meter impact resistant

Specification:

LED: Cree XP-L HI
Max output: 510 lumen
Glass: Toughened ultra-clear mineral glass
Material: Aircraft grade aluminum alloy
Body: Military type III hard anodising
Battery: 1*16340 or CR123
Length: 65mm
Head diameter: 21.8mm
Tail diameter: 21.8mm
Weight: 30 gram(without battery)

Recommended batteries

Type	Dimensions	Nominal Voltage	Usability
Rechargeable Battery (Li-Ion)	16340	3.7V	Recommended
Non-rechargeable Battery (Lithium)	CR123A	3V	Usable

Output & Runtime

FL1 STANDARD	High 1*16340	Mid	Low	Ultra low
	510 LUMENS	100 LUMENS	5 LUMENS	0.5 LUMENS
	0.75h	1.5h	15h	150h
	138 meters (Beam Distance)			
	4800cd (Max Intensity)			
	1.5 meter (Impact Resistant)			
	IPX-8 (2 meters under water)			



 
Note:

- Stated data has been measured according to the international flashlight testing standards ANSI/NEMA FL1by using one JETBeam 3.7V 680 mAh 16340 in the laboratory.The data may vary due to different battery and different environment conditions.

2. To avoid overheating and ensure LED lifespan, the flashlight would automatically step down slowly till the output is lower than 65% of the high brightness when temperature is too high. For turbo again,click the side switch and choose the mode.

Operation of flashlight:

(Please follow the pictures). Insert one 16340 or CR123 battery

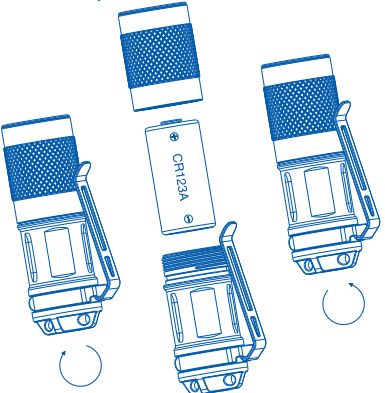


ON/OFF

Switch on the flashlight by fastening the head, or switch off by loosening.

Mode/Output Selection

 Brightness can be changed from Ultra low > Low > Med > High by turning the flashlight off and, within one second, on again. A delay of more than a second will cause the flashlight to return to Low brightness when switched on again.

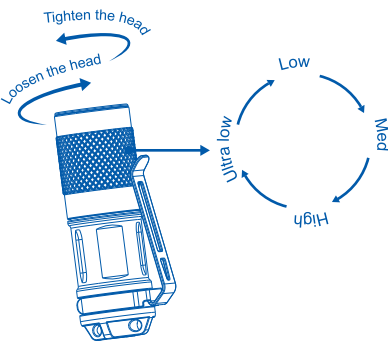

Replace battery:

When the battery fails, the brightness will get lower or the mode cannot be changed. Replace the battery as soon as possible.

Storage and maintenance

- Remove the battery If light will be stored or unused for an extended time frame.
- Store the torch away from fire and high humidity environments.
- Clean the body with a soft cloth; lubricate threads and o ring with silicon grease semi annually.



Caution

- Insert battery with positive (+) end towards head of torch. Torch won't light up if batteries ends reversed.
- Avoid direct exposure to eyes.

Warranty

- Within 15 days of purchase, free replacement is provided by seller.
- JetBeam offers a 24 month (2 year) free warranty service from date of purchase. Buyer will be responsible for shipping of item. Over 24 months, buyer is responsible for incurred parts and shipping costs.

Unwarrantable

- Damage, destruction, disassembly and unauthorized intentional modifications.
- Destruction caused wrong operation (such as reverse batteries.)
- Damage due to improper storage or battery leakage.

Service

- Contact your retailer, or email us info @jetbeam-light.com, call us +86-755-28077748
- Any update information will be displayed on www.jetbeamlight.com. we reserve the rights to explain eventually.



JET-II MK



Operation Manual

Thank you for choosing our products!
www.jetbeamlight.com

400X87mm 128g双铜 单色 (蓝色) 双面印刷, 过光面, 风琴折!

■ C100M70Y0K0

折叠时, 此英文封面朝上