 


# M37 PRO

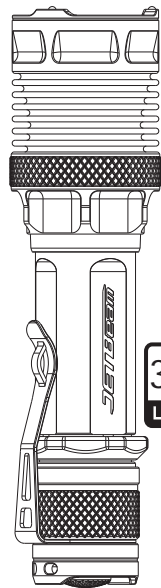

## 使用说明书

感谢您购买我们的产品!  
www.jetbeamlight.com

### 产品参数

- LED: CREE XHP50.3 色温5000k
- 最大输出: 3700流明
- 最远射程: 465米
- 最长续航时间: 66小时
- 反光杯: 光滑反光杯
- 防水级别: IPX-8 (水下2米)
- 跌落: 1.5米防摔
- 镜片: 镀膜矿物质玻璃
- 攻击头钢圈顶端配有3颗超高硬度氧化锆陶瓷珠, 助于迅速破窗
- 筒身材质: 航空级铝合金
- 筒身处理: 军规三级硬质氧化
- 使用电池: 1\*21700 (3.7V)
- 开关: 尾部开关
- 长度: 147.8mm
- 头部直径: 38.5mm
- 尾部直径: 27.5mm
- 重量: 137.5克(不含电池)

### 亮度和时间

FLI STANDARD	高亮	中亮	低亮	爆闪
	3700 流明	450 流明	30 流明	3700 流明
	2.2 小时	5.6 小时	66 小时	-
	465米	173米	52米	-
	54200cd	7500cd	680cd	-
	1.5米			
	IPX8 (水下2米)			

以上数据是按照国际手电筒测量标准ANSI/NEMA, FL1所述之测量方法, 使用1节JETBeam 21700 5100mAh(3.7V)可充电动力锂电池在实验室内测量所得, 不同电池或使用环境可能会对以上数据产生影响。

01

 
### 配件

21700 5100毫安动力电池1节、TYPE-C充电线、备用O圈、手绳、抱夹、战术环、说明书

### 操作手电

#### 装入电池

1. 打开尾盖, 从包装内取出电池;
2. 电池正极朝向手电头部(LED所在的一端)装入手电;
3. 旋紧筒身;
4. 如你已装上抱夹, 拆装电池时请扭筒身另一侧螺母, 以免抱夹刮花筒身。

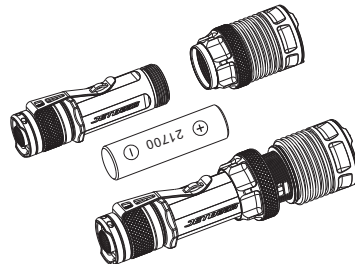

#### 开/关机:

按下尾部开关即可点亮或关闭手电。

#### 瞬间点亮:

轻触按住开关, 松开则关闭。

#### 档位切换:

开机状态下, 关机再快速开机(2秒内)切换到下一档, 默认档位顺序: 高-中-低(高亮开机), 不带记忆。

02

关机状态下, 轻触开关点亮手电筒, 松开再快速轻触开关, 选择档位后将开关完全按下开机。

#### 切换默认档位:

快速5次或以上轻触尾部战术开关, 最后一次长按(按压间隔小于0.3秒)LED会闪烁3次, 默认换挡顺序变更为低-中-高。一样操作可以再换回高-中-低。

#### 进入爆闪:

关机状态下快速轻触两次进入爆闪档(按压间隔小于0.3秒)。

#### 充电功能:

将充电盖扭开 配有TYPE-C 2.0A充电。

#### 电量指示:

每次开机自动执行电量显示功能, 五秒后指示灯自动关闭;  
1: 绿灯亮5秒: 40%-100%  
2: 红灯亮5秒: 40%-20%  
3: 红灯一直闪烁: 小于20%, 提示请及时充电。

#### 充电指示灯显示:

充电中: 红色指示灯常亮;  
充满后: 绿色指示灯常亮;  
充电时手电筒无法打开。

#### 保护功能:

电路有温控监测, 保护电路;  
电路具有低压降档, 低压时逐级降档以增加运行时间和保护电池;  
电路具有低压关机功能, 低于2.6V关机, 保护电池。

03

### 警告

不能将光线直接照射眼睛, 以免对眼睛造成伤害。

### 保养手电

1. 保存手电时请远离有火和潮湿环境。
2. 请每半年使用软布清洁手电筒的螺母, 并使用硅润滑油润滑螺母, 另请经常清洁手电的导电接触面/接触点。

### 保固

JETBEAM® 产品拥有售后保固服务。在购买本产品的15天内, 如果有任何质量问题均可向经销商要求免费更换。在购买本产品的60个月内享受免费保固服务。在超过60个月免费保固期后, 本产品享有终身有限度保固服务, 如需要更换重要部件则需要收取成本费用。

#### 本保固规则不适用于以下情况:

1. 人为破坏, 拆解, 改装本产品
2. 错误操作导致产品损坏(如反电池等)
3. 电池漏液导致产品损坏
4. 盐水或海水腐蚀导致产品损坏

如需协助, JETBEAM® 敬请消费者首先联系购买产品的经销商或零售商, 以获得最迅速的售后服务或发邮件到 info@jetbeamlight.com

04

### 备注

 
1. 手电筒在开启1分钟后高亮档后会启用自降档功能。防止过热并且有效保护LED寿命, 温度过高时手电开始缓慢降档, 直到亮度低于70%, 如果需要再用超高亮档, 只需关闭手电筒再次打开即可。
2. 请将电池按照正极朝灯头方向放入, 反装电池手电筒将不能工作。
3. 若手电筒放在背包内运输或者长时间储存请把电筒内的电池取下, 防止错误开启或电池漏液。
4. 若充电口有水渍时, 请勿进行充电, 须清理干净后方可充电。
5. 产品数据如有更新, 敬请以JETBEAM官方网站为准。

深圳市杰特明电子科技有限公司  
咨询热线: +86-0755-28077748  
销售邮箱: info@jetbeamlight.com  
网 址: www.jetbeamlight.com  
公司地址: 广东省深圳市龙华新区大浪南路墩背工业区二栋三楼  
邮 编: 518109



05

# M37 PRO

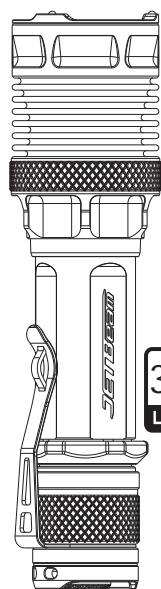

## User Manual

Thanks for Your Purchase  
www.jetbeamlight.com

### Specification

- LED: CREE XHP50.3
- Color Temperature: 5000K
- Max Lumen: 3700 lumen
- Max Beam Distance: 465M
- Runtime: 66 hours
- Reflector Cup: precise smooth reflector
- Waterproof Level: IPX-8 (underwater 2m)
- Drop Test: 1.5m
- Lens: coated mineral glass
- Strike Bezel: 3 high hardness silicon nitride balls on the top of stainless steel strike bezel
- Body Material: aviation aluminum alloy
- Surface Finished: military H III hard anodization
- Battery Type: 1\*21700 (3.7V)
- Switch: tail switch
- Length: 147.8mm
- Head Diameter: 38.5mm
- Tail Diameter: 27.5mm
- Weight: 137.5g (battery included)

### Lumen & Runtime

FLI STANDARD	High	Medium	Low	Strobe
	3700LM	450LM	30LM	3700LM
	2.2h	5.6h	66h	-
	465m	173m	52m	-
	54200cd	7500cd	680cd	-
	1.5m			
	IPX8			

The above data is measured according to the international flashlight measurement standard ANSI/NEMA, FL1-described measurement method, and obtained by testing with JETBeam 21700 5100mah battery in the laboratory. Different batteries or environments may affect the above data.

01

 
### Accessories

1\* 21700 5100 battery, TYPE-C Charging Cable, O Ring, Lanyard, Pocket Clip, Tactical Ring, Manual

### User Operation

#### Insert the battery

1. Open the tail cap and pick out the battery from the package.
2. Insert the battery with the positive terminal facing towards the head of the flashlight (the end where the LED is located)
3. Tighten the body.
4. If you have installed the pocket clip, please twist the threading on the other end of the body to avoid scratching by the pocket clip when removing or installing the battery.

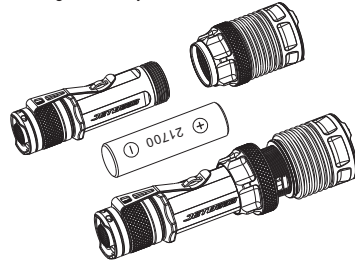

#### Power On/Off:

Single-click the tail switch to switch on or off.

#### Instant light-on:

Press and hold the switch lightly to light up instantly and release to turn off.

#### Mode Switch:

When the device is turned on, then turning it off and then quickly turning it back on (within 2 seconds) will switch to the next mode. The default mode sequence is: High - Medium - Low ("High" is default mode when switch on), without memory.

02

When the flashlight is turned off, lightly touch the switch to turn on the flashlight. Release, then quickly lightly touch the switch again to select the mode. Fully press the switch to turn on the flashlight after selecting the mode.

#### Switch Default Mode

Quickly tap the tail tactical switch 5 times or more, and on the final tap, long-press (with intervals less than 0.3 seconds). The LED will flash 3 times, and the default mode sequence will change to low-medium-high. Performing the same operation will switch back to high-medium-low

#### Strobe

When the flashlight is turned off, quickly tap twice to enter strobe mode (with intervals less than 0.3 seconds).

#### Charging

Twist off the charging cover. Equipped with a TYPE-C port. Charging at 2.0A.

#### Power Indicator

Each time the device is powered on, the battery level display function is automatically activated. The indicator light will automatically turn off after five seconds.

- 1: Green light on for 5 seconds: 40%-100%
- 2: Red light on for 5 seconds: 40%-20%
- 3: Red light flashes: Less than 20%, a reminder for charging.

#### Charging Indicator

Charging: red indicator light on.  
Fully Charged: Green indicator on.  
The flashlight doesn't work when charging.

#### Prevention

- The circuit has temperature monitor. After 1 minute of being on the highest mode, it will gradually decrease, protecting the circuit;
- The circuit has low-voltage downshifting, which gradually reduces the brightness levels to increase runtime and protect the battery when the voltage is low;
- The circuit features low-voltage shutdown function, automatically turning off when the voltage drops below 2.6V to protect the battery.

03

### Warning

Do not expose the light to human eyes.

### Flashlight Maintenance

1. Keep the flashlight away from fire and moist environments when storing.
2. Please use a soft cloth to clean the threads of the flashlight every six months, and apply lubricating oil to lubricate the threads. Also, please regularly clean the conductive contact surface/contact points of the flashlight.

### Warranty

JETBeam products come with after-sales warranty service. Within 15 days of purchasing this product, you can request free replacement from the dealer for any quality issues. Within 60 months of purchasing this product, you can enjoy free warranty service. After the free 60-month warranty period, this product is entitled to limited lifetime warranty service. If replacement of important components is required, a cost fee will be charged.

#### The warranty rule does not apply to the following situations

1. Intentional damage, disassembly, or modification of the product.
2. Product damage caused by improper operation (such as installing batteries incorrectly).
3. Product damage caused by battery leakage.
4. Product damage caused by corrosion from saltwater or seawater.

If help is needed, please kindly first contact the dealer or retailer for fastest after-sales service or send an email to info@jetbeamlight.com.

04

### NOTE

1, After 1 minute of being turned on at high brightness, the flashlight will activate the auto-downshift function. This prevents overheating and effectively protects the LED lifespan. When the temperature is too high, the flashlight will gradually downshift until the brightness is below 70%. If you need to use the ultra-high brightness mode again, simply turn off the flashlight and turn it on again.

2, Please insert the battery with the positive terminal facing towards the head of the flashlight. If the battery is inserted incorrectly, the flashlight will not work.

3, If the flashlight is transported in a backpack or stored for a long time, please remove the batteries from the flashlight to prevent accidental activation or battery leakage.

4, If there are water stains in the charging port, please do not charge. The charging port must be cleaned thoroughly before charging.

5, If the product data updates, please refer to the official JETBEAM website for accuracy.

JETBeam Electronic Technology Co., Ltd  
E-mail: info@jetbeamlight.com  
Tel: +86-0755-28077748  
Fax: +86-0755-28175738  
Website: www.jetbeamlight.com  
Address: Dunbei Industrial Park Dalang South Road Longhua Town Shenzhen China 518109



05

330x120mm 128g双铜, 单黑双面印刷, 风琴折