

## 使用说明书

感谢您购买我们的产品！  
[www.jetbeamlight.com](http://www.jetbeamlight.com)

### 产品特性

1. 专为军事、执法、探险及户外狩猎所设计
2. 采用SST40 LED, 最高输出达1200流明
3. 使用晶透技术, 结合全新数字化光学系统设计光杯，射程可达235米
4. 数字恒流驱动电路, 续航最长可达300小时
5. 新一代IC数字电路设计，LED与电池双重智能保护，最大程度延长LED和电池使用寿命，使用更安全
6. 双面镀膜防刮光学镜片
7. 航空级铝合金制造
8. 三级硬质阳极氧化抗磨表面处理
9. IPX-8级防水(水下2米)
10. 1米抗防撞高度

### 产品参数

LED: SST40  
最大输出: 1200流明  
反光杯: 精密金属反光杯  
镜片: 镀膜矿物质玻璃  
筒身材质: 航空级铝合金  
筒身处理: 军规三级硬质氧化表面耐磨处理  
使用电池: 1\*18650 / 2\*CR123A  
开关: 360°尾部战术开关  
长度: 134.3mm  
头部直径: 27.5mm  
尾部直径: 25.7mm  
重量: 81.9克(不含电池)

### 选用电池

| 电池类型     | 尺寸规格   | 标称电压 | 是否可用 |
|----------|--------|------|------|
| 可充电锂离子电池 | 18650  | 3.7V | 推荐   |
| 一次性锂电池   | CR123A | 3.0V | 可用   |

01

### 亮度和时间

| FL1 STANDARD | 高亮       | 中亮    | 低亮    | 爆闪     |
|--------------|----------|-------|-------|--------|
|              | 1200流明   | 240流明 | 0.5流明 | 1000流明 |
|              | 2.3小时    | 5.0小时 | 300小时 | 4小时    |
|              | 235米     |       |       |        |
|              | 13800坎德拉 |       |       |        |
|              | 1米       |       |       |        |
|              | IPX8     |       |       |        |

**免费赠送:** Type-c接口2600mAh 18650电池, 充电线, 抱夹, 手绳, 防水圈



注:

1. 以上数据是按照国际电筒测量标准ANSI/NEMA, FL1所述之测量方法, 使用一节JETBeam 18650 2600mAh(3.7V)可充电锂电池在实验室内测量所得, 不同电池或使用环境可能会对以上数据产生影响;

2. 电筒在开启超高亮档后会启用自降档功能. 防止过热并且有效保护LED寿命, 温度过高时手电开始缓慢降档, 直到亮度低于70%, 如果需要再用超高亮档, 只需关闭电筒再次打开或拧松灯头后再拧紧即可。

### 警告

 
1. 请将电池按照正极朝灯头方向放入, 反装电池电筒将不能工作.
2. 若电筒放在背包内运输或者长时间储存请把电筒内的电池取下防止错误开启或电池漏液，
3. 不能将光线直接照射眼睛, 以免对眼睛造成伤害.

02

### 操作手电

#### 装入电池

1. 打开尾盖, 从包装内取出电池
2. 电池正极朝向手电头部(LED所在的一端)装入手电
3. 旋紧尾盖

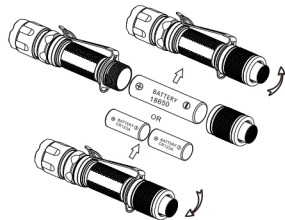

#### 开/关机:

开关机，尾盖中心带锁开关ON/OFF手电.

#### 档位切换

**改变亮度:** 点亮状态，快速将尾盖按钮侧按(360度均可), 依次(高亮-中亮-低亮)换挡, 有记忆。

**进入闪光:** 在关灯状态, 将尾盖按钮侧按(360度均可)立即暴闪; 维持约0.5秒以上, 保持暴闪; 在开灯状态, 将尾盖按钮侧按(360度均可) 维持约0.5秒以上, 进入暴闪, 松开侧按, 恢复闪光前亮度。

#### 锁键与解锁

按下尾部中心战术开关开机后，快按3次360度侧键，LED闪烁2次进入锁键。锁键状态，长按360度侧键3秒解锁。

03

### 保固电筒

1. 长时间不用手电时请取出电池
2. 保存手电时请远离有火和潮湿环境
3. 请每半年使用软布清洁电筒的螺牙, 并使用硅润滑油润滑螺牙, 另请经常清洁手电的导电接触面/接触点.

#### 保固

JETBEAM® 产品拥有售后保固服务. 在购买本产品的15天内, 如果有任何质量问题均可向经销商要求免费更换. 在购买本产品的60个月内享受免费保固服务. 在超过60个月免费保固期后, 本产品享有终身有限度保固服务, 如需要更换重要部件则需要收取成本费用.

#### 本保固规则不适用于以下情况:

1. 人为破坏, 拆解, 改装本产品
2. 错误操作导致产品损坏(如装反电池等).
3. 电池漏液导致产品损坏
4. 盐水或海水腐蚀导致产品损坏

如需协助, JETBEAM® 敬请消费者首先联系购买产品的经销商或零售商, 以获得最迅速的售后服务或发邮件到 [info@jetbeamlight.com](mailto:info@jetbeamlight.com).

**备注:** 产品数据如有更新, 敬请以JETBEAM官方网站为准.

 
★ 仅限国内区域, 跨区销售将不予保修。

#### 深圳市杰特明电子科技有限公司

咨询热线: +86-0755-28077748  
销售邮箱: [info@jetbeamlight.com](mailto:info@jetbeamlight.com)  
网 址: [www.jetbeamlight.com](http://www.jetbeamlight.com)  
公司地址: 广东省深圳市龙华新区大浪南路墩背工业区一栋三楼  
邮 编: 518109



04

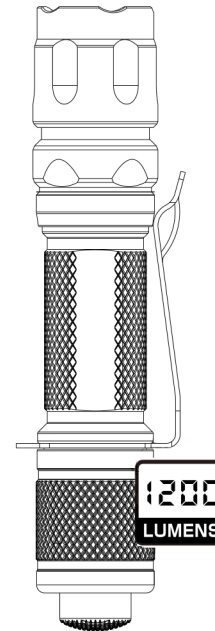

## Operation Manual

Thank you for choosing our products!  
[www.jetbeamlight.com](http://www.jetbeamlight.com)

### Features

1. Specially designed for military, law enforcement, adventure and hunting;
2. SST40 LED with max output of 1200 lumens;
3. Latest high performance optical system, max beam distance up to 235 meters;
4. Built-in efficient power management circuit which allows a max runtime of 300 hours;
5. Overheating protection - prevents overheating of case and ensures extended lifespan of LED;
6. Toughened ultra-clear mineral glass with double-sided anti-reflective coating;
7. Waterproof-IPX8;
8. Impact resistance 1 meter;

### Specification

LED: SST40  
Max output: 1200 lumens  
Reflector: Precise smooth reflector  
Lens: Coated mineral glass  
Material of body: Aero grade aluminum alloy with hard anodized finish.  
Battery: 1\*18650 or 2\*CR123  
Switch: 360°full angle tactical tail switch.  
Dimensions:  
Length: 134.3 mm  
Diameter of head: 27.5 mm  
Diameter of tail; 25.7 mm  
Weight: 81.9 grams (without battery)

### Battery for Use

|                              | Type  | Nominal Voltage | Compatibility    |
|------------------------------|-------|-----------------|------------------|
| Rechargeable Lithium battery | 18650 | 3.7V            | Yes(recommended) |
| Disposable Lithium battery   | CR123 | 3V              | Yes              |

01

### Output & Runtime

| FL1 STANDARD | High    | Medium | Low   | Strobe |
|--------------|---------|--------|-------|--------|
|              | 1200LM  | 240LM  | 0.5LM | 1000LM |
|              | 2.3h    | 5.0h   | 300h  | 4h     |
|              | 235m    |        |       |        |
|              | 13800cd |        |       |        |
|              | 1M      |        |       |        |
|              | IPX8    |        |       |        |

**Included for free:** O ring, Lanyard, Clip, 18650 2600mAh Type-c rechargeable battery, Type-c charging cable



1. Stated specifications have been measured according to the international flashlight testing standards (ANSI/NEMA F1) by using one JETBeam 3.7V 2600mAh 18650 Lithium-ion battery in the laboratory. The data may vary when tested using a battery of a different capacity or under different environmental conditions.

2. To avoid overheating and extend lifespan of internal components, the flashlight will automatically step down from the turbo brightness when high temperatures are detected. For turbo again, restart the flashlight or loosen the head and refasten.

### Warning

 
- \* Insert the batteries with the positive (+) end pointing forward, otherwise the light doesn't work.
- \* It's forbidden to light the eyes directly in case of any damage.

02

### Operation of flashlight

#### Insert battery

1. Unscrew and remove the tail cap of the flashlight.
2. Insert one 18650 battery or two CR123 batteries with the positive (+) end pointing forward.
3. Replace the tail cap and fasten tightly.

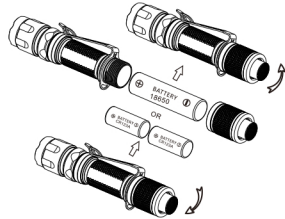

#### Switch:

360 degree full angle tactical tail switch.

#### ON/OFF Switching:

**Switch ON:** Click the tailcap button.  
**Switch OFF:** Click the tailcap button again when the light is on.

#### Mode switching:

When the flashlight is on, short pressing the tail switch in side angle, user can get High> Middle> Low outputs in cycle. Brightness output will be memorized when user turn on the light next time.

#### Strobe mode:

When flashlight is off, pressing the tail switch in any side angle, it will enter into strobe directly. Keep holding for 0.5s, it will enter keeping strobe mode. When flashlight is on, short pressing the tail switch in side angle and keep holding for 0.5s, flashlight will enter into strobe mode, release finger, flashlight will be back into normal lumination mode.

#### Lock and unlock:

When the flashlight is on, click the tail switch three times, the flashlight flashes two times and will enter the lock state. Pressing and hold the tail switch three seconds to unlock.

03

### Storage and maintenance

1. Remove the batteries if light will be stored or unused for an extended time period.
2. Store the flashlight away from fire and high humidity environments.
3. Clean the body with a soft cloth; lubricate threads and O-ring with silicon grease semi-annually.

### Warranty

1. Within 15 days of purchase, free replacement is provided by seller.
2. JetBeam offers a 24 month (2 year) free warranty service from date of purchase. Buyer will only be responsible for shipping costs of item. After 24 months, buyer is responsible for replacement parts as well as shipping costs.

### Unwarrantable

1. Damage, destruction, disassembly and unauthorized intentional modifications.
2. Destruction caused by wrong operation (such as reversing batteries).
3. Damage due to improper storage or battery leakage.

### Service

1. Contact your retailer, or email us [info@jetbeam-light.com](mailto:info@jetbeam-light.com). call us +86-755-28077748.
2. Any update information will be displayed on [www.jetbeamlight.com](http://www.jetbeamlight.com), and which we reserve the right to change information.

For more information, please follow us on facebook: JETBeam.

### JETBeam Electronic Technology Co., Ltd

E-mail: [info@jetbeamlight.com](mailto:info@jetbeamlight.com)  
Tel: +86-0755-28077748  
Fax: +86-0755-28175738  
Website: [www.jetbeamlight.com](http://www.jetbeamlight.com)  
Address: Dunbei Industrial Park, Dalang South Road, Longhua Town, Shenzhen, China, 518109



04

275x120mm 128g双铜，单黑双面印刷，风琴折