

Operation Manual

Thank you for choosing our products!

www.jetbeamlight.com

Features

1. Specially designed for military,law enforcement,adventure and hunting;

2. SST40 N4 BC LED with max output of 950 lumens;

3. Latest high performance optical system, max beam distance up to 230 meters;

4. Built-in efficient power management circuit which allows a max runtime of 100 hours;

5. Overheating protection - prevents overheating of case and ensures extended lifespan of LED;

6. Toughened ultra-clear mineral glass with double-sided anti-reflective coating;

7. Waterproof-IPX8;

8. Impact resistance 1 meter;

Specification

LED: SST40 N4 BC

Max output: 950 lumens

Reflector: Precise smooth reflector

Lens: Coated mineral glass

Material of body: Aero grade aluminum alloy with hard anodized finish.

Battery: 1*18650 or 2*CR123

Switch: 360°full angle tactical tail switch.

Dimensions:

Length: 134.3 mm

Diameter of head: 28.5 mm

Diameter of tail: 26 mm

Weight: 98.8 grams (without battery)

Battery for Use

	Type	Nominal Voltage	Compatibility
Rechargeable Lithium battery	18350	3.7V	Yes(recommended)
Disposable Lithium battery	CR123A	3V	Yes

Output & Runtime

FLI STANDARD	High	Medium	Low	Strobe
	2xCR123 1x18650	950LM 950LM	210LM 180LM	20LM 0.6LM
	2xCR123 1x18650	1h 1.5h	5h 6.5h	50h 100h
	230m			
	13800cd			
	1M			
	IPX8			

Note

1. Stated specifications have been measured according to the international flashlight testing standards (ANSI/NEMA FI) by using one JETBeam 3.7V 2600mAh 18650 Lithium-ion battery in the laboratory. The data may vary when tested using a battery of a different capacity or under different environmental conditions.

2. To avoid overheating and extend lifespan of internal components, the flashlight will automatically step down from the turbo brightness when high temperatures are detected. For turbo again, restart the flashlight or loosen the head and refasten.

Warning

* Insert the batteries with the positive (+) end pointing forward, otherwise the light doesn't work.

* It's forbidden to light the eyes directly in case of any damage.


Operation of flashlight

Insert battery

1. Unscrew and remove the tail cap of the flashlight.

2. Insert one 18650 battery or two CR123 batteries with the positive (+) end pointing forward.

3. Replace the tail cap and fasten tightly.

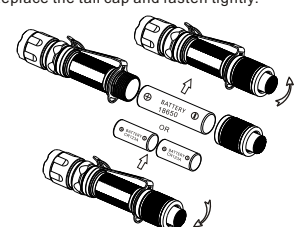

Switch:

360 degree full angle tactical tail switch.

ON/OFF Switching:

Switch ON: Click the tailcap button.

Switch OFF: Click the tailcap button again when the light is on.

Mode switching:

When the flashlight is on, short pressing the tail switch in side angle, user can get High> Middle > Low outputs in cycle. Brightness output will be memorized when user turn on the light next time.

Strobe mode:

When flashlight is off, pressing the tail switch in any side angle, it will enter into strobe directly. Keep holding for 0.5s, it will enter keeping strobe mode. When flashlight is on, short pressing the tail switch in side angle and keep holding for 0.5s, flashlight will enter into strobe mode, release finger, flashlight will be back into normal lumination mode.

Lock and unlock:

When the flashlight is on, click the tail switch three times, the flashlight flashes two times and will enter the lock state. Pressing and hold the tail switch three seconds to unlock.

Storage and maintenance

1. Remove the batteries if light will be stored or unused for an extended time period.

2. Store the flashlight away from fire and high humidity environments.

3. Clean the body with a soft cloth; lubricate threads and O-ring with silicon grease semi-annually.

Warranty

1. Within 15 days of purchase, free replacement is provided by seller.

2. JetBeam offers a 24 month (2 year) free warranty service from date of purchase. Buyer will only be responsible for shipping costs of item. After 24 months, buyer is responsible for replacement parts as well as shipping costs.

Unwarrantable

1.Damage, destruction, disassembly and unauthorized intentional modifications.

2.Destruction caused by wrong operation (such as reversing batteries).

3.Damage due to improper storage or battery leakage.

Service

1.Contact your retailer, or email us info@jetbeam-light.com. call us +86-755-28077748.

2.Any update information will be displayed on www.jetbeamlight.com, and which we reserve the right to change information.

For more information, please follow us on facebook: JETBeam.

JETBeam Electronic Technology Co., Ltd

E-mail: info@jetbeamlight.com

Tel: +86-0755-28077748

Fax: +86-0755-28175738

Website: www.jetbeamlight.com


Address: Dunbei Industrial Park, Dalang South Road, Longhua Town, Shenzhen, China, 518109

RoHS

CE

Recycle

Warranty

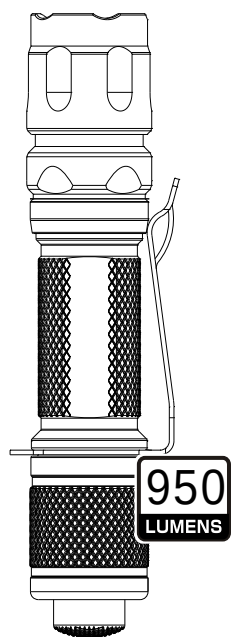

Kasutusjuhend

Täname, et valisite meie toote!

www.jetbeamlight.com

Omadused

1. Taskulambi kasutusvaldkonnad: armee, politsei, pääste, seiklus ja jaht;

2. SST40 N4 BC LED maksimaalse väljundiga 950 lumenit;

3. Kõrgekvalliteediline optika süsteem, maksimaalne valguskiire ulatus kuni 230 meetrit;

4. Sisse ehitatud efektiivne toitehaldusahel, mis võimaldab maksimaalset tööaega kuni 100 tundi;

5. Ülekuumenemiskaitse hoiab ära korpuse ülekuumenemise ja tagab LED elemendi pikema eluea;

6. Karastatud üliselge mineraalklaas kahepoolse peegeldusvastase kattega;

7. Kaitseaste IPX8;

8. Löögikindlus 1 meeter;

Spetsifikatsioonid

LED: SST40 N4 BC

Max väljund: 950 lumenit

Reflektor: Ülisile reflektor

Lääts: Kaetud mineraalklaas

Korpuse materjal: Aeroklassi alumiiniumsulam

anodeeritud viimistlusega

Patarei/Aku: 1*18650 või 2*CR123

Lüliti: 360° taktikaline sabalüliti

Pikkus: 134.3 mm

Pea läbimõõt: 28.5 mm

Kere läbimõõt: 26 mm

Kaal: 98.8 g (ilma patareideta)

Aku/Patarei tüüp

	Tüüp	Nominaalpinge	Ühilduvus
Laetav Liitium Aku	18350	3.7V	JAH (Soovitatud)
Ühekordne Liitium Patarei	CR123A	3V	JAH

Väljund ja Tööaeg

FLI STANDARD	High	Medium	Low	Strobe
	2xCR123 1x18650	950LM 950LM	210LM 180LM	20LM 0.6LM
	2xCR123 1x18650	1h 1.5h	5h 6.5h	50h 100h
	230m			
	13800cd			
	1M			
	IPX8			

Märge

1. Antud spetsifikatsioonid on mõõdetud vastavalt rahvusvahelistele taskulampide testimisstandarditele (ANSI/NEMA FI), kasutades laboris ühte JETBeam 3.7V 2600mAh 18650 liitiumioonakut. Andmed võivad erineda, kui testimisel kasutatakse erineva võimsusega akut või test viiakse läbi erinevates keskkonnatingimustes.

2. Ülekuumenemise vältimiseks ja sisemiste komponentide eluea pikendamiseks alandab taskulamp kõrgete temperatuuride tuvastamisel automaatselt heledust Turbo režiimis. Turbo režiimi ennistamiseks taaskäivitage taskulamp või keerake lahti taskulambi pea ja kinnitage see uuesti.

Hoiatus

* Sisestage patareid nii, et positiivne (+) ots oleks suunatud ettepoole, muidu taskulamp ei tööta.

* Keelatud on suunata taskulambi valgust otse silma, see võib kaasa tuua kahjustusi silma võrkkestale.


Taskulambi kasutamine

Aku/Patarei sisestamine

1. Keerake lahti ja eemaldage taskulambi sabakork.

2. Sisestage üks 18650 aku või kaks CR123 patareid nii, et positiivne (+) ots oleks suunatud ettepoole.

3. Paigaldage sabakork tagasi ja kinnitage see tihedalt.

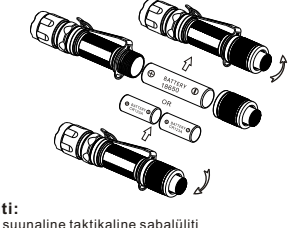

Lüliti:

360° suunaline taktikaline sabalüliti

Sisse/Välja Lülitamine:

Sisselülitamine: Vajutage sabalüliti, taskulamp süttib. Väljalülitamine: Vajutage sabalüliti uuesti, kui taskulamp on sisse lülitatud.

Töörežiimide vahetamine:

Kui taskulamp on sisse lülitatud, vajutage lühidalt sabalüliti mistahes külgsuunas, et vahetada töörežiime Kõrge > Keskmine > Madal vahel. Viimati kasutatud töörežiim jäetakse meelde, kui taskulamp järgmisel korral sisse lülitada.

Stroborežiim:

Kui taskulamp on välja lülitatud, vajutage sabalüliti mistahes külgsuunas, et aktiveerida stroborežiim. Vajutades lüliti külgsuunas kauem kui 0,5 sekundit, jääb stroborežiim sisselülitatuks. Väljalülitamiseks vajutage lüliti uuesti külgsuunas. Kui taskulamp on sisse lülitatud, vajutage sabalüliti mistahes külgsuunas ja hoidke seda all kauem kui 0,5 sekundit, taskulamp lülitub stroborežiimi. Vabastage lüliti ja taskulamp lülitub tagasi eelnevasse valgustusrežiimi.

Lukustusrežiim:

Kui taskulamp on sisselülitatud, vajutage sabalüliti mistahes külgsuunas kiiresti kolm korda järjest. Taskulamp vilgub kaks korda ja siseneb lukustusrežiimi. Avamiseks vajutage ja hoidke sabalüliti mistahes külgsuunas kauem kui 3 sekundit.

Hoiustamine ja hooldus

1. Eemaldage patareid, kui valgustit hoiustatakse või ei kasutata pikemat aega.

2. Hoidke taskulampi eemal tulest ja kõrge niiskusega keskkondadest.

3. Puhastage taskulambi korpust pehme lapiga. Määrige keermeid ja O-rõngast silikoonmäärdega kaks korda aastas.

Garantii

JetBeam taskulambile kehtib 24 kuud (2 aastat) tasuta garantii alates ostukuupäevast. Ostja vastutab ainult kauba saatmiskulude eest. 24 kuu möödudes vastutab ostja nii varuosade kui ka saatmiskulude eest.

Garantii välistus

1. Kahjustumine või hävimine tahtliku tegevuse läbi.

2. Lahti võtmine ja volitamata isiku poolt tehtud tahtlikud muudatused.

3. Kahjustumine, mis on põhjustatud valest kasutusest (näiteks aku/patareide valesti paigaldamine).

3. Ebaõigest hoiustamisest või aku lekkimisest tingitud kahju.

Remont

1. Võtke ühendust e-kirja või telefoni teel oma edasimüüjaga või tootjaga alljärgnevatel kontaktidel.

2. Kogu uuendusteave kuvatakse veebisaidil www.jetbeamlight.com. Tootja jätab endale õiguse seda teavet muuta.

Edasimüüja

Mobiled Estonia OÜ

E-mail: mobiled@mobiled.ee

Tel: +372 5015178

Koduleht: www.mobiled.ee

Tootja

JETBeam Electronic Technology Co. Ltd.

E-mail: info@jetbeamlight.com

Tel: +86-0755-28077748

Koduleht: www.jetbeamlight.com

RoHS

CE

Recycle

Warranty

275x120mm 128g双铜，单黑双面印刷，风琴折